


User Manual

Digital Loadcell Indicator

08/2025

TLP-1109-LI

DIGITAL LOADCELL INDICATOR Software Install Guide

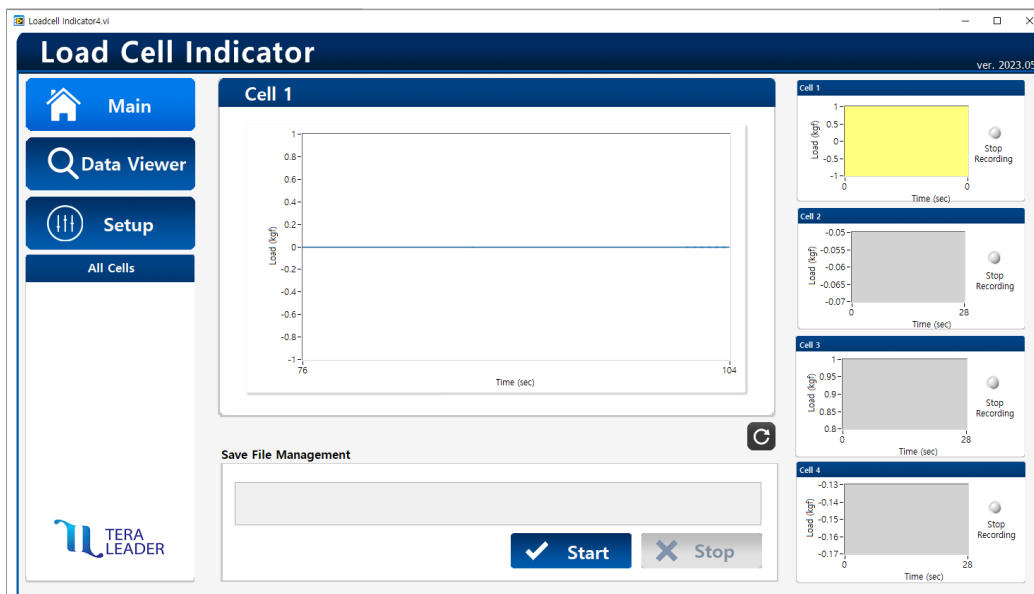


1. SOFTWARE INTALLATION

How to Install RS232 Drivers





1. Connect the RS232 port to the computer

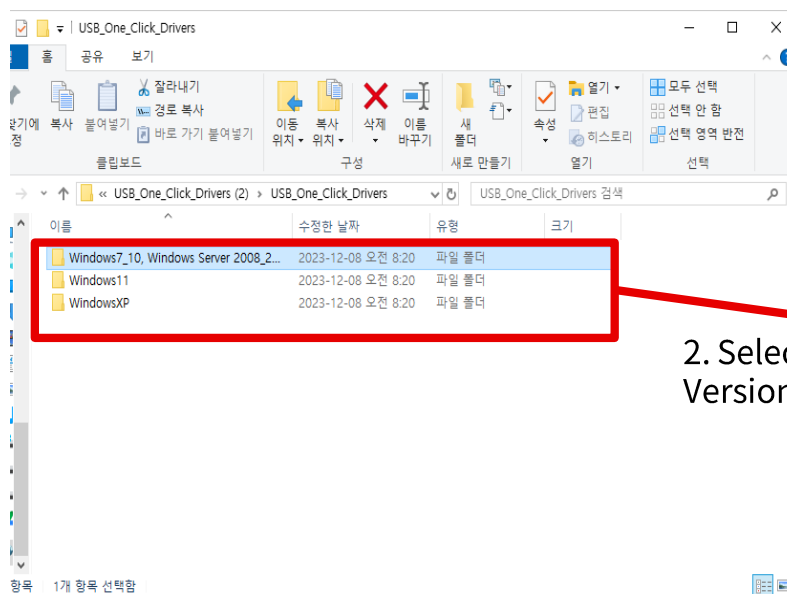

2. Select Windows Version


1. SOFTWARE INTALLATION

How to Install RS232 Drivers

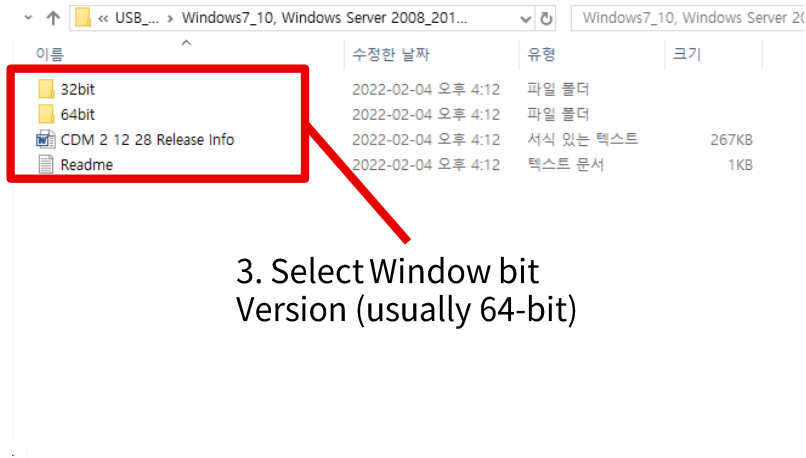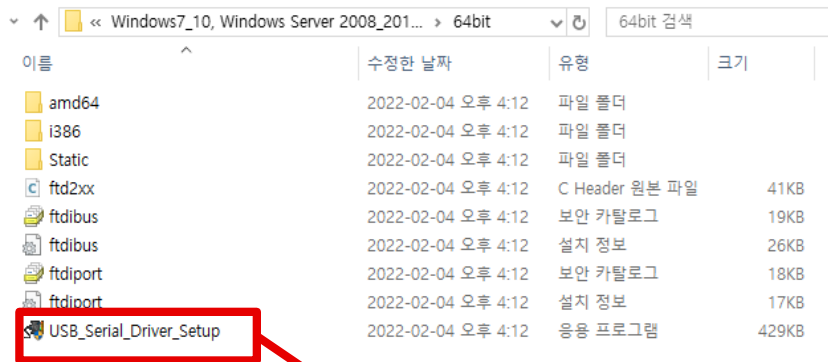

1. SOFTWARE INSTALLATION



How to Install RS232 Drivers

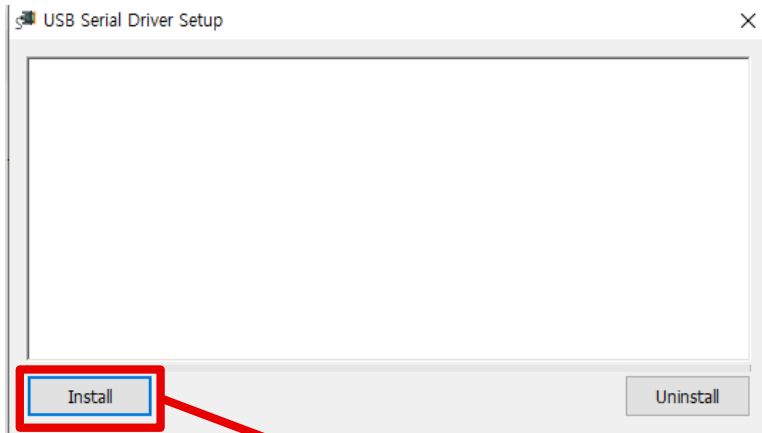

5. Click 'Install' button

1. SOFTWARE INTALLATION



Software Installation Guide

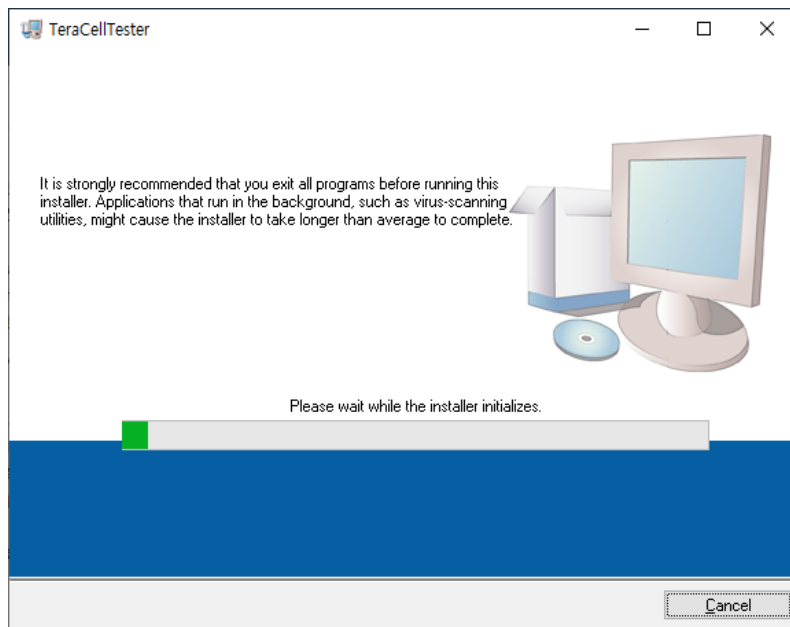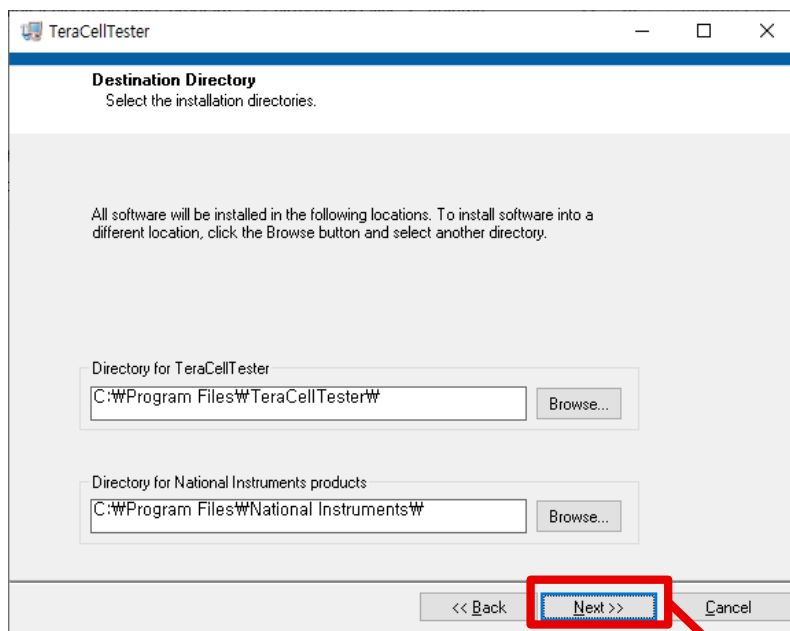

6. Click the Next button


1. SOFTWARE INTALLATION

Software Installation Guide

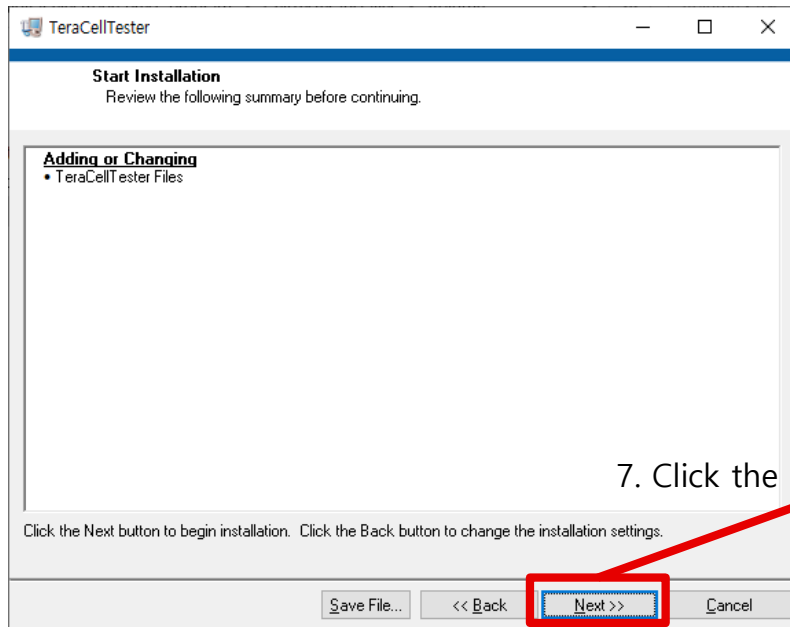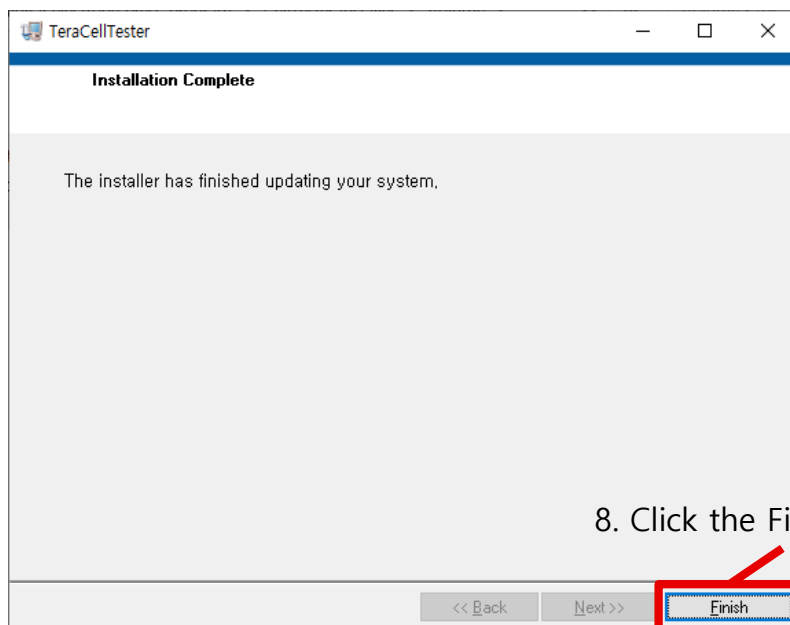

1. SOFTWARE INTALLATION

Software Installation Guide


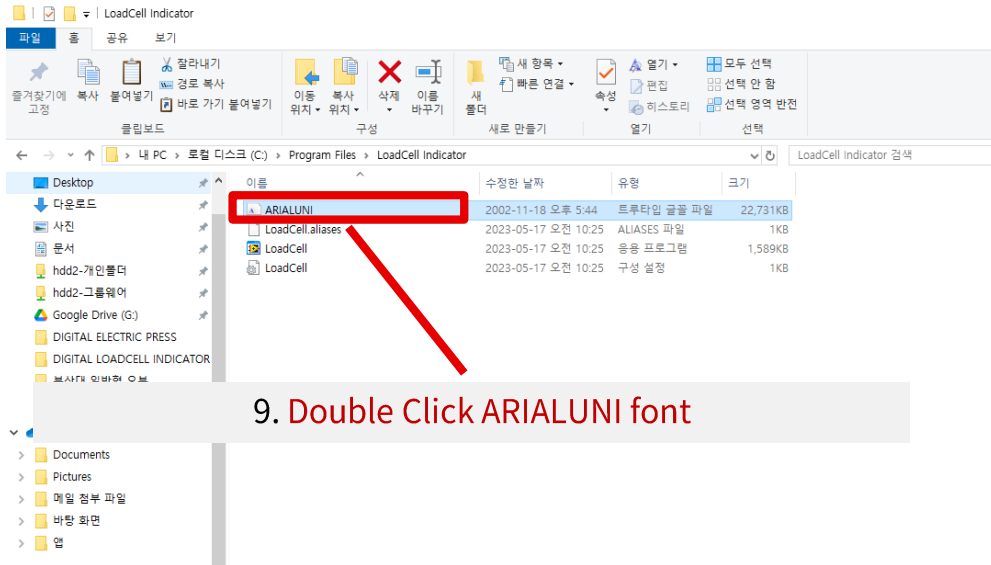


10. Click and Install font





1. SOFTWARE INTALLATION

Software Installation Guide

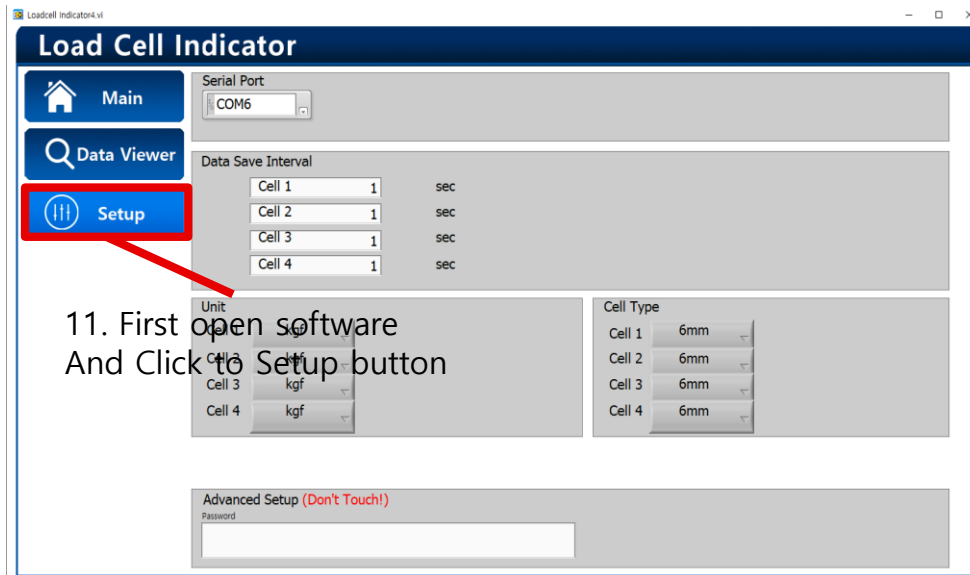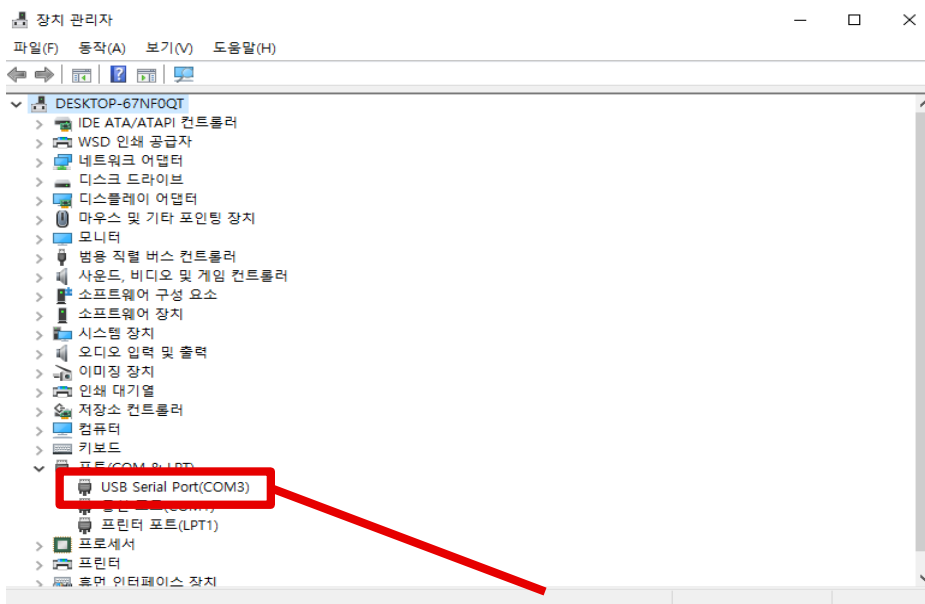

1. SOFTWARE INSTALLATION

Software Installation Guide

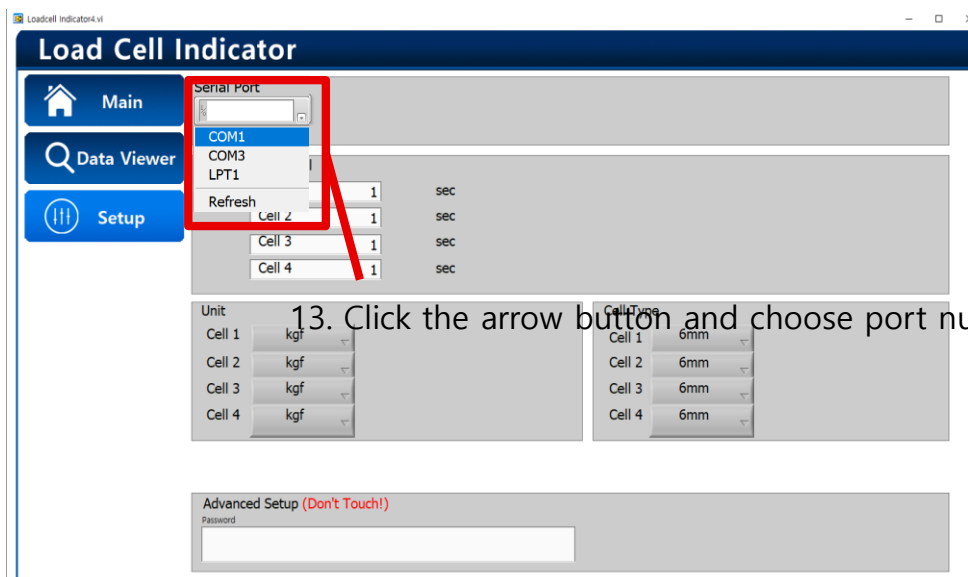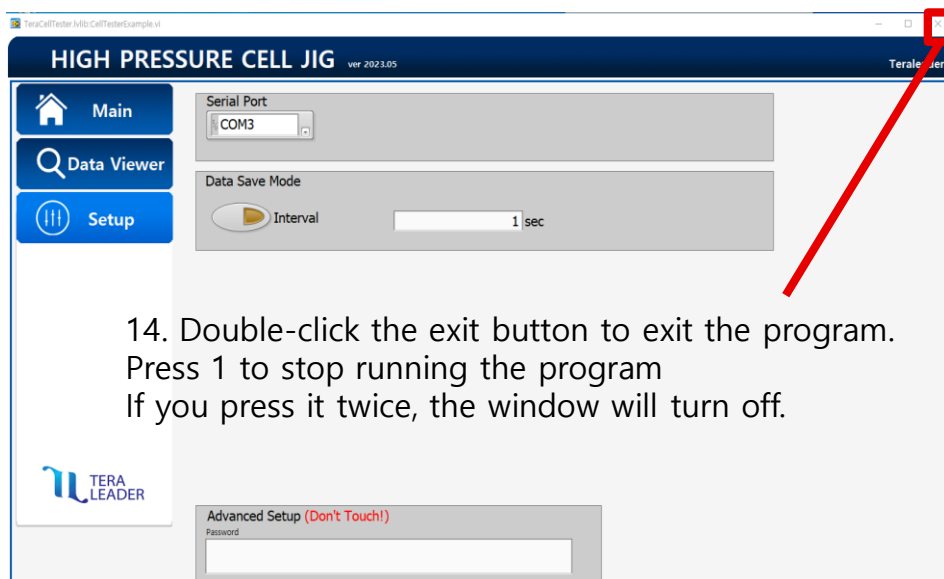

1. SOFTWARE INTALLATION

Software Installation Guide

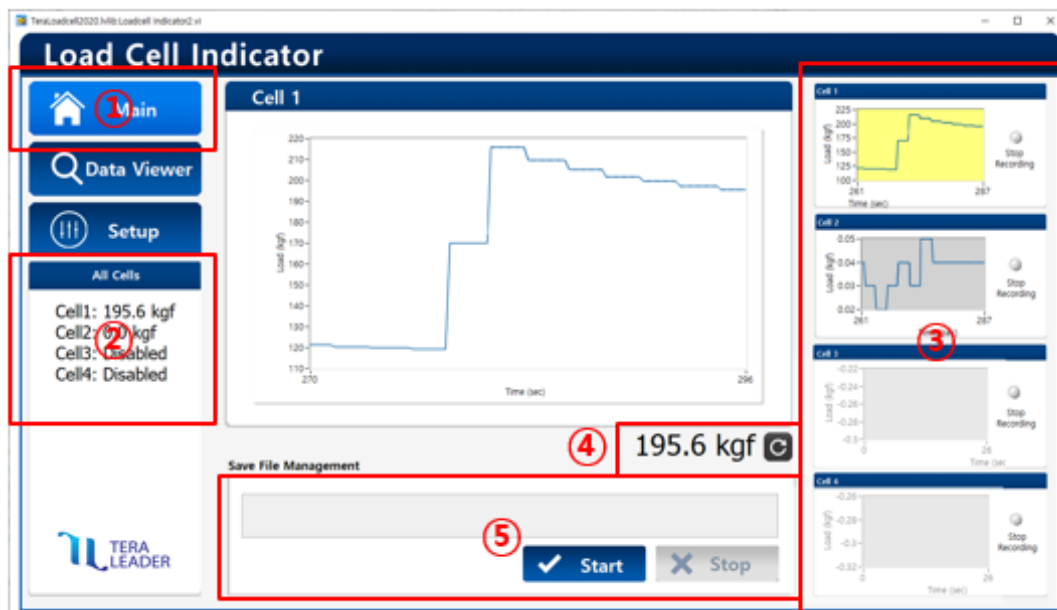


Figure 3. Main Screen

Description		
①	MAIN	Main screen displayed when the program starts
②	ALL CELLS	View real-time load values of all 4 channels simultaneously
③	MONITOR	Displays load trend of a selected channel as a graph (shown in the center when clicked)
④	STATE	Shows real-time value of the selected channel, click “  ” to set tare
⑤	SAVE	Save measured data to a file

Specifications are subject to change without notice.
All TERALEADER, INC trademarks and trade names are the property of TEALEADER
Instruments, Inc. All other trademarks and trade names are the property of their
respective companies.

